

LAUNDRY GUIDE SYMBOLS



Wash in commercial machine in water not exceeding 95°C, at normal setting.



Wash in commercial machine in water not exceeding 95°C, at permanent press setting.



Wash in domestic or commercial machine in water not exceeding 70°C, at normal setting.



Wash in domestic or commercial machine in water not exceeding 60°C, at normal setting.



Wash in domestic or commercial machine in water not exceeding 60°C, at permanent press setting.



Wash in domestic or commercial machine in water not exceeding 50°C, at normal setting.



Wash in domestic or commercial machine in water not exceeding 50°C, at permanent press setting.



Wash in domestic or commercial machine in water not exceeding 50°C, at delicate/gentle setting.



Wash in domestic or commercial machine in water not exceeding 40°C, at normal setting.



Wash in domestic or commercial machine in water not exceeding 40°C, at permanent press setting.



Wash in domestic or commercial machine in water not exceeding 40°C, at delicate/gentle setting.



Wash in domestic or commercial machine in water not exceeding 30°C, at normal setting.



Wash in domestic or commercial machine in water not exceeding 30°C, at permanent press setting.



Wash in domestic or commercial machine in water not exceeding 30°C, at delicate/gentle setting.



Wash gently by hand in water not exceeding 40°C.



Wash gently by hand in water not exceeding 30°C.



Wash in domestic or commercial machine at any temperature, at normal setting.



Do not wash.