

Just about anything,
anytime, and your
favorite pricing.



VV Prints.com

www.vvprints.com
Fabric sheets purchased from Printswfabric.com

Original Retail Price
\$98.00

3718 S. 294th Street • SeaTac, WA 98188 • (206) 599-3835 • www.vvprint.com

Washable Cotton Fabric Sheets



50-Sheet Pack

*Classically designed and paper-backed
to work with your Inkjet Printer*

Use your computer and inkjet printer to make personalized prints your favorite photographs or designs on our specially treated fabric sheets. Just print, wait for the ink to dry, remove the paper backing, iron, let dry, and you're ready to send.

Follow our Step-by-Step Directions to get a variety colored, washable piece of cotton fabric to create your own unique quilts, mats, clothing or home furnishings!

Our 200 thread count Cotton Fabric Sheets are perfect for use in:



Quilts • Pillows

Wall Hangings

Clothing

Pouches, etc.

and so much more!



Hints for pain-free printing: *(Please follow our simple Step-by-Step Directions on the back for the best results.)*

- The fabric and backing paper must be tight and flat. If the fabric becomes separated from the backing sheet, use white tape on the paper side to secure the paper and fabric together. If this backing and is needed, iron the tape to flatten it.
- Before you load any fabric sheets into your printer be sure to set or dry your threads. **Do not pull threads.**
- Never force a fabric sheet into any printer. Place the sheet flat against the paper guide, square with the edge roller.
- Feed one sheet at a time. If using an HP printer, fabric side goes down, paper side up in the feed tray. Epson or fabric side up, paper down. If you aren't sure, make a small "X" on a blank piece of regular paper and see how it goes through.
- Humidity and storage conditions of the fabric sheets do affect performance. Store flat in low humidity conditions. Other conditions affecting performance are the age of your printer and the condition of the pickup and drive rollers inside the printer. Printed fabric sheets look different depending on what printer is used. Print on pages first to check.
- Check your printer's ability for "cleaning" sometimes if the output quality appears to have changed OR if you can see banding or white lines through your image. Use the plain or plain/white paper setting in the paper feed/driver menu.
- Fabric and paper have flat and lay in your printer. Things can get compressed as to "loose" debris out of the printer medium or periodically a good preventative maintenance. Or you can use a dry-cleaning medium.