walker tote bag pattern





 Sew C on top of the Step I unit as shown. Fold C back so WS are together and press.






 Place the Step 2 unit on the top of the RS of D, aligning the bottom edges while leaving 1-1/2" extra at the top as shown.




4. Sew F as binding to the sides and bottom of the Step 3 unit using a 1/4" seam allowance. Trim off the excess binding at the top. Hint: These raw edges will be covered later. Hand stitch binding to the back of the pocket.



 Sew B and H together. Press. Layer B/H WS up, batting, and A RS up and quilt as desired. Trim lining and batting to the edges of A.



 Fold the quilted bag in half and baste side and bottom edges together as shown.

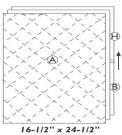








Trim

Note: Before sewing the ends of the Js together, measure the opening of the bag and adjust Js to fit. Size may vary due to the amount of quilting.


Sew ends of Js together.



10. Place bag into the fold of J and top stitch outside edge, leaving the inside edge loose. Then hand stitch the other folded edge of J to the inside of the bag.



11. Fold the Es in half lengthwise RS together and stitch along the outside edge. Turn under 1/2" on each end and press in place. Turn right sides out. Top stitch tabs. Apply loop tape to one end of both bag tabs.



12. Insert bag tabs into the bag and stitch to the side without the pocket. Apply the hook tape to the top binding of the bag as shown. Sew a button on each tab (optional).

