


Optional: Attach this panel between the engine and the cabin for provide extra structural support. Glue it to the floor where it overlaps the wheelwells, glue it through the hole in the side of the car, and glue it to the floorboard.

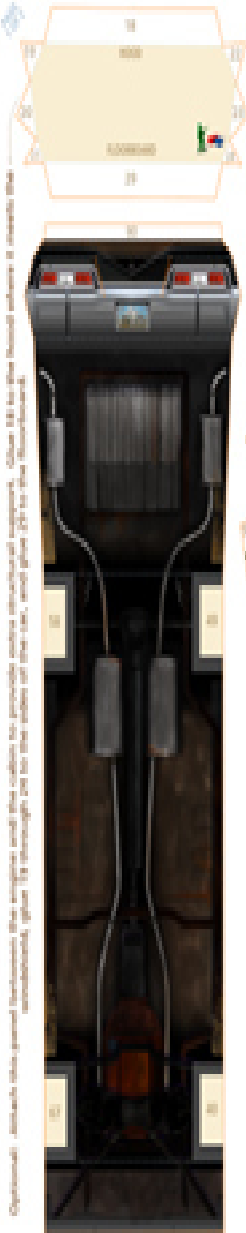

Place the completed front seat in the car and glue the top section to the full width of the floor where the assembly of the front wheelwells is 24 inches long. Make the front backrest and glue it to floor at 20. Make the left and right wheelwells and glue to floor at 21, 22, 23, 24, 25, and 26. Fold the front's side wings around the opening of the front wheelwells, and glue to the floor at 27.



For the side entry, fold the visible portion and glue it to half at 1. Then insert it into the slot in the driver's door and glue it at 2 and 3.

Glue the completed front passenger seat to the floor where it overlaps the wheelwells, glue it through the hole in the side of the car, and glue it to the floorboard.